






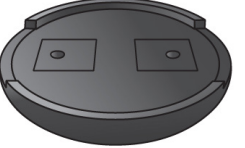




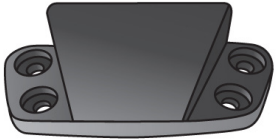


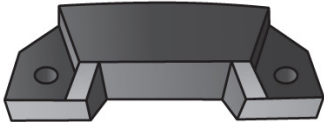





### CAST SNOW PLOW SHOES

<p><b>Cast Snow Plow Shoe CSC-1-2</b></p> <p>Cast Frame Shoe - <math>\frac{3}{4}</math>" Thick  <math>\frac{3}{4}</math>" Square Hole with 6" Centers            Uses <math>\frac{3}{4}</math>" Square Head Bolts</p> 	<p><b>Cast Snow Plow Shoe CSC-3</b></p> <p>Cast Wing Shoe            Used on 6" Blades with 8" Centers            Uses <math>\frac{5}{8}</math>" Carriage Bolts</p> 	<p><b>Cast Snow Plow Shoe CSC-4</b></p> <p>Cast Wing Shoe            Compatible with Center-punched            Blades with 8" Centers            Uses <math>\frac{5}{8}</math>" Carriage Bolts</p> 
<p><b>Cast Snow Plow Shoe CSC-5</b></p> <p>Boat Cast Frame Shoe  <math>\frac{13}{16}</math>" Square hole with 16 - <math>\frac{1}{2}</math>" Centers            Uses <math>\frac{3}{4}</math>" Square Head Bolts</p> 	<p><b>Cast Snow Plow Shoe CSC-8</b></p> <p>Cast Moldboard Shoe            Used on 8" Center-punched Blades            with 8" Centers            Uses <math>\frac{5}{8}</math>" Square Head Bolts</p> 	<p><b>Cast Snow Plow Shoe CSC-8-9</b></p> <p>Cast Wing Shoe            Used on 6" Top Punch Blades            with 8" or 9" Centers            Uses <math>\frac{5}{8}</math>" Carriage Bolts</p> 
<p><b>Cast Snow Plow Shoe CSC-9</b></p> <p>Cast Moldboard Shoe            Used on 8" Center-punched Blades            with 12" Centers            Uses <math>\frac{5}{8}</math>" Carriage Bolts</p> 	<p><b>Cast Snow Plow Shoe CSC-10</b></p> <p>Mushroom Cast Frame Shoe  <math>\frac{3}{4}</math>" Square Hole with 6" Centers            Uses <math>\frac{3}{4}</math>" Square Head Bolts</p> 	<p><b>Cast Snow Plow Shoe CSC-11</b></p> <p>Cast Wing Shoe            Compatible with 6" Blades            with 12" Centers            Uses <math>\frac{5}{8}</math>" Carriage Bolts</p> 
<p><b>Cast Snow Plow Shoe CSC-12</b></p> <p>Cast Wing Shoe            Compatible with 8" Center-punched            Blades with 12" Centers            Uses <math>\frac{5}{8}</math>" Carriage Bolts</p> 	<p><b>Cast Snow Plow Shoe CSC-22</b></p> <p>Cast Wing Shoe (Heavy Duty)            Compatible with 8" Top-punched            Blades with 8" Centers            Uses <math>\frac{5}{8}</math>" Carriage Bolts</p> 	<p><b>Cast Snow Plow Shoe CSC-23</b></p> <p>Cast Wing Shoe (Heavy Duty)            Compatible with 8" Top-punched            Blades with 12" Center            Uses <math>\frac{5}{8}</math>" Carriage Bolts</p> 

Cast Snow Plow Shoe CSC-24	Cast Snow Plow Shoe CSC-26	Cast Snow Plow Shoe CSC-29
<p>Frink Reversible Cast Moldboard Shoe Compatible with 8" Center-punched Blades with 8" Centers Uses 5/8" Carriage Bolts</p> 	<p>Cast Wing Shoe (Heavy Duty) Compatible with 8" Center-punched Blades with 12" Centers Uses 5/8" Carriage Bolts</p> 	<p>Heavy Duty Cast Moldboard Shoe (Double) Used on 8" Top-punched Blades with 12" Centers Uses 5/8" Carriage Bolts</p> 
Cast Snow Plow Shoe CSC-30	Cast Snow Plow Shoe CSC-32	Cast Snow Plow Shoe CSC-34
<p>Cast Wing and Moldboard Shoe Used on Everest-Tenco Plows with 8" Centers Uses 5/8" Carriage Bolts</p> 	<p>Cast Wing and Moldboard Shoe Used on Everest-Tenco Plows with 12" Centers Uses 5/8" Carriage Bolts</p> 	<p>Cast Wing and Moldboard Shoe Used on Tenco Plows with 8" Centers Uses 5/8" Carriage Bolts</p> 
Cast Snow Plow Shoe CSC-43	Cast Snow Plow Shoe CSC-4350	
<p>Cast Wing Shoe (Heavy Duty) Used on 6" Blades with 8" Center-punched Blades Uses 5/8" Carriage Bolts</p> 	<p>Cast Moldboard Shoe Compatible with 8" Center-punched Blades with 8" Centers Used on Tenco Plows Uses 5/8" Carriage Bolts</p> 